



STANDARD FLEXPOST™ ANCHORING INSTRUCTIONS FOR ADHESIVE

Tools Required:


- Marker
- Gloves
- Standard Caulk Gun
- Rag

Parts Included:

- 1 Base Plate
- 1 MasterWeld 948

NOTE: THIS PRODUCT IS NOT INTENDED TO BE USED ON ASPHALT


WARNING: MUST ANCHOR UNIT ON THE SAME LEVEL AS THE PARKING LOT FOR PROPER FUNCTIONALITY

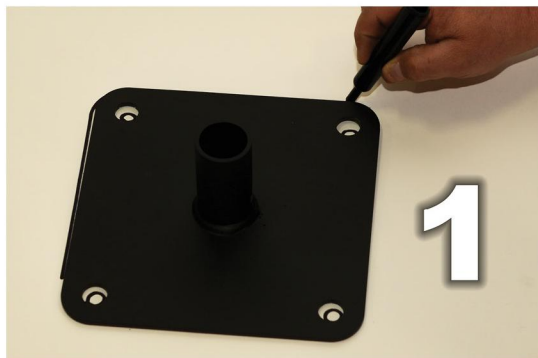

- **Ensure that the application area is free of dirt, grease, oil, and moisture.**
- **Place the base in desired location and use a wax pencil or marker to outline the exterior of the base.**



- **Using the MasterWeld 948, glue the area within the outline.**

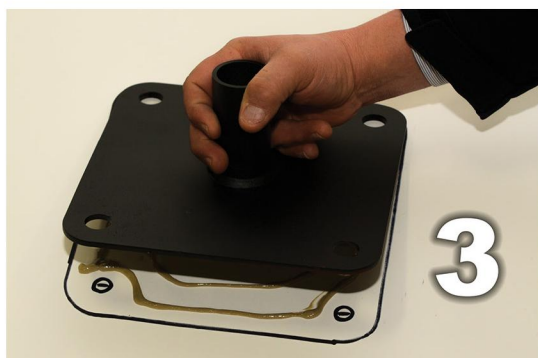

- **Place the base on the adhesive within the drawn lines.**



- **Adhesive will come out the sides. Use a rag to wipe excess. Wait 24 hours for adhesive to be fully cured.**