STANDARD FLEXPOST™ ANCHORING INSTRUCTIONS FOR ASPHALT

Tools Required:	Parts Included:
• Rubber Mallet	• 1 Base Plate
• Wax Pencil / Marker	• 4 Expansion Plugs
• 3/4" Masonry Drill Bit	• 4 Hex Lag Screws
• 15/16" Ratchet	• 4 Flat Washers

WARNING: MUST ANCHOR UNIT ON THE SAME LEVEL AS THE PARKING LOT FOR PROPER FUNCTIONALITY

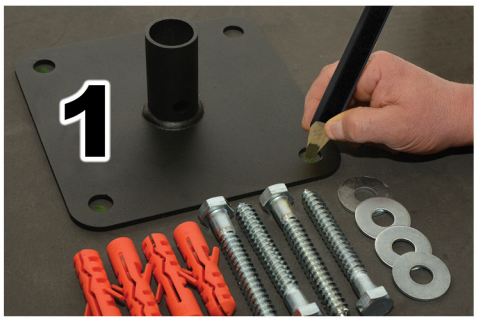

• Place base plate in desired anchoring location

• Mark the four base holes with a wax pencil

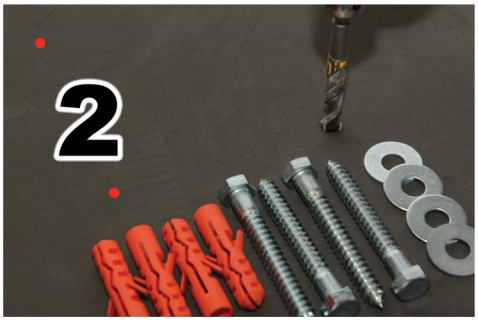

• Using a 3/4" masonry bit, drill 5" in depth

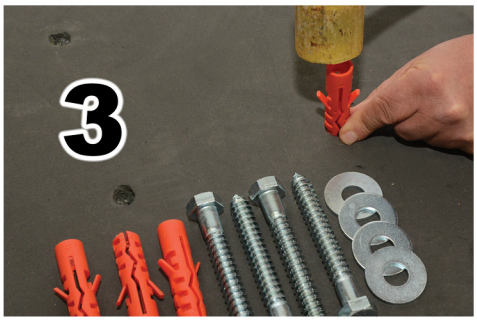

• Use a rubber mallet or hammer to stuff expansion plugs into the drilled holes

• The top of each expansion plug should be flush with the asphalt

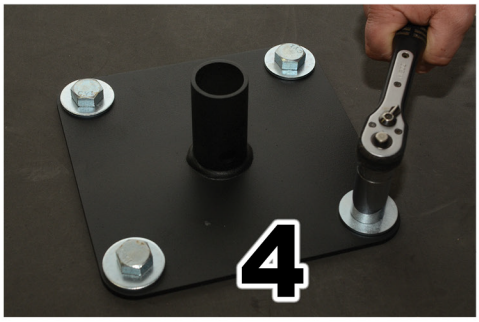

• Place the base plate over the four holes and use a socket wrench with a 15/16" drive to thread all four hex lag screws

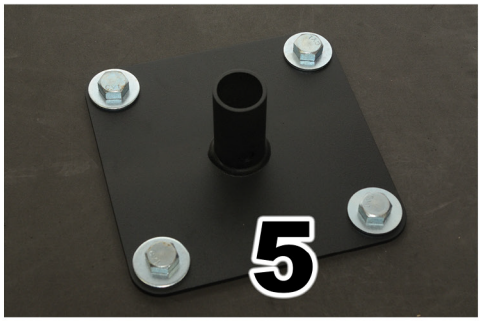

• Make sure all four hex lag screws are screwed down tightly