Heavy Duty Guardrail - Core and Drop - 27" Guardrail or Shorter

1. Layout guardrail in appropriate location (template available upon request)
2. Mark centerline of post on floor
3. Using a 5 1/8" core bit; core at least 6" deep or depth of concrete
4. Ensure plastic floor sleeves are on the bottom of the posts
5. Using a forklift or two person team, align guardrail above cored holes (guardrail legs will be loose, but become secure once installed)
6. Guide guardrail legs into cored holes
7. Your guardrail is now installed and removable when necessary

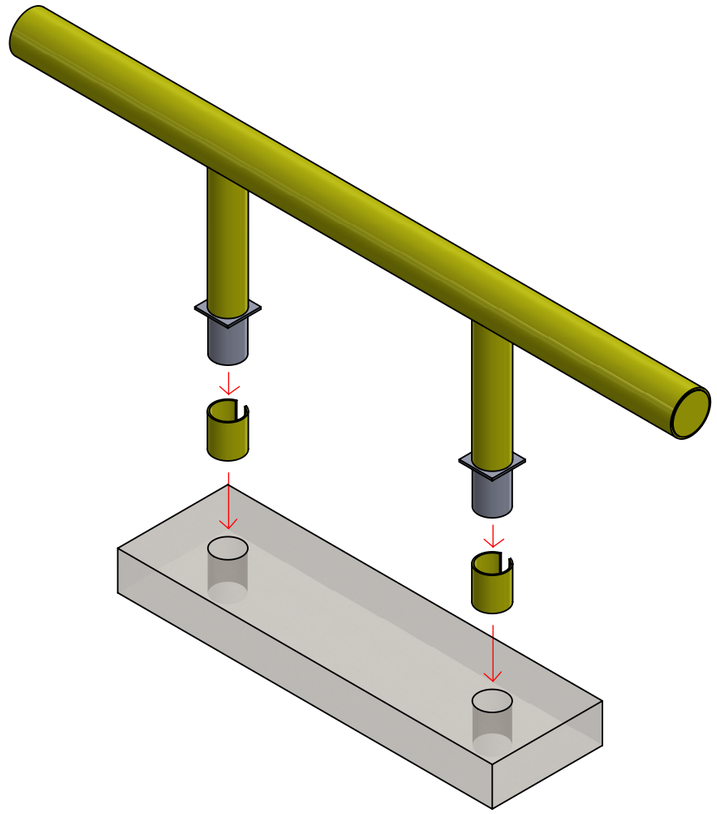

Items Required:

CORE AND DROP HGR

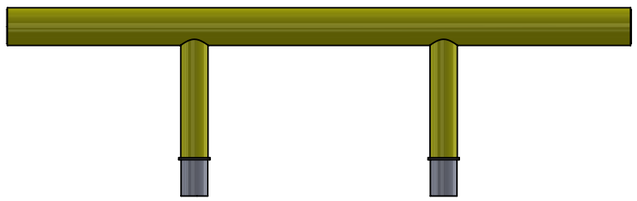

QTY:1

PLASTIC IN GROUND SLEEVE



QTY:2

5 1/8" DRILL BIT

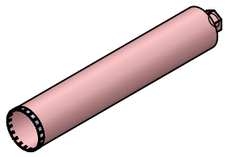

QTY:1

THIS DRAWING AND ALL THE INFORMATION THEREON IS THE PROPERTY OF THE IDEAL SHIELD, IS CONFIDENTIAL AND MUST NOT BE MADE PUBLIC, NOR COPIED, NOR USED, TO THE DISADVANTAGE OF SAID IDEAL SHIELD AND IS SUBJECT TO RETURN ON DEMAND
COPYRIGHT 2003
IDEAL SHIELD

UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES SURFACE FINISH: TOLERANCES: LINEAR: ANGULAR:		FINISH:				DEBURR AND BREAK SHARP EDGES	DO NOT SCALE DRAWING / REVISION
	NAME	SIGNATURE	DATE				TITLE: HGR CORE AND DROP INSTRUCTION
DRAWN							
CHK'D							
APPV'D							
MFG							
Q.A				MATERIAL:			DWG NO. HGR-C-DR-01 / A3
				WEIGHT:		SCALE:1:20	SHEET 1 OF 1