Heavy Duty Guardrail

Bolt-In Base Plate Installation

Available for All Heights

1. Layout Guardrail in appropriate location on concrete
2. Using a ¾” drill-bit; drill holes with a hammer drill
3. Secure base plates with (4) ¾” x 6 ¼” anchors*
4. Your Guardrail is now installed
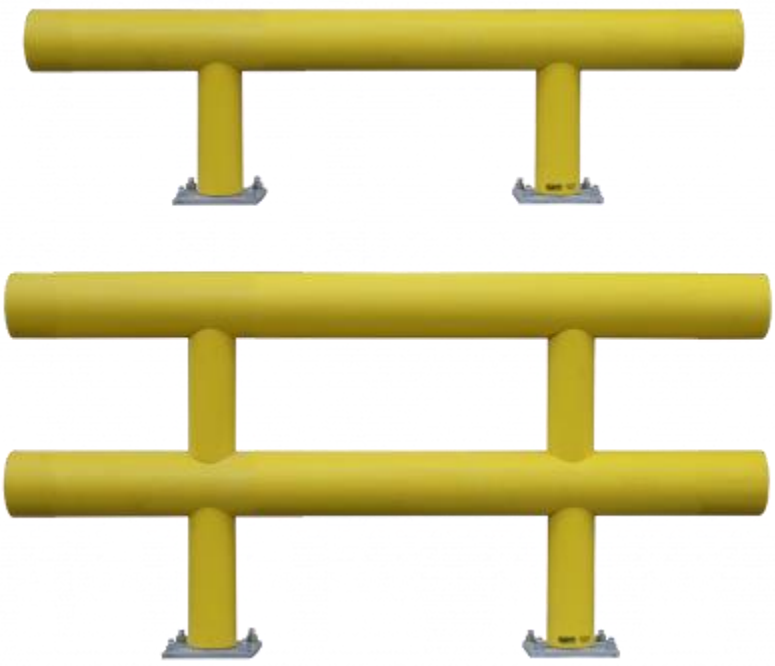
*epoxy anchors can be used as well